

警告

この警告に反した取り扱いをすると、人が死亡または重傷を負う可能性があることを示します。

電池について

■ 電池について
使い方を間違えると液漏れによるけが、周囲の汚染、破壊による火災・けがの原因になります。以下のことは必ずお守りください。
■ 加熱したり火中に投入しないでください。
■ 分解・改造をしないでください。
■ ショートさせないでください。
■ 充電をしないでください。
■ 極性（＋と－の向き）を注意して正しく入れてください。

ボタン型電池について

■ ボタン型電池は、特に幼児の手の届かないところに置いてください。
■ 万一、幼児が飲み込んだ場合には、ただちに医師と相談してください。

注意

この警告に反した取り扱いをすると、人が傷害または物的傷害を負う可能性があることを示します。

電池について

■ 電池について
使い方を間違えると液漏れによるけが、周囲の汚染、破壊による火災・けがの原因になります。以下のことは必ずお守りください。
■ 本機で指定されている電池以外は使用しないでください。

表示画面について

■ 液晶表示画面を強く押したり、強い衝撃を与えないでください。液晶表示画面のガラスが割れてけがの原因となる場合があります。
■ 液晶画面が壊れた場合、表示画面内部の液体には触れないでください。皮膚の炎症の原因となる場合があります。
■ 万一、口に入った場合は、すぐにうがいをして医師に相談してください。
■ 目に入ったり、皮膚に付着した場合は、清浄な流水で最低15分以上洗浄したあと、医師に相談してください。

故障を防ぐためのご注意

- キッチンタイマーは精密な電子部品で構成されていますので、高温や低温の所、湿気やホコリの多い所での使用や保管および急激な温度変化や強いショックをさけてください。
- キッチンタイマーの操作は、液晶表示画面を確認しながら確実にキーを押してください。
- キッチンタイマーは電池交換する以外は絶対に分解しないでください。また、使用すみの電池や液晶パネルなどは火中に投入しないでください。
- お手入れは、シンナー・ベンジンなど揮発性の液体をさけ、乾いた柔らかい布か、中性洗剤液に浸し固くしぼった布でおふきください。
- 万一、本機使用により生じた損害、逸失利益または第三者からの請求についても、当社では一切その責任を負えませんので、あらかじめご了承ください。

各部のなまえとはたらき

ご使用前の準備

絶縁シートを取り除く

電池フタから出ている絶縁シートを取り除いてからご使用ください。【図1】
※付属の電池は、動作確認用電池のため長く持ちません。

電池の交換時期

液晶表示画面に【図2】の表示が出たら、新しいボタン電池（CR2032）と交換してください。

※表示後の動作ではアラームが鳴らない、表示が消えるなど、正しく動作しない場合があります。

電池の交換の仕方

電池フタロックボタンを解除し【図3】、電池フタを外します。電池を交換したら電池フタを閉め、電池フタロックボタンを“LOCK”の方へスライドさせます。

この商品の特徴

■ ブロックによる表示

この商品は、画面上に降り積もるブロックの量で経過時間をお知らせするキッチンタイマーです。

※ 設定時間が1分未満の場合はデジタル数字のみの表示となります。

5

使い方

■ 時間をセットし、タイマーを起動させる

- 1 分ボタンと秒ボタンを同時に押します。
液晶表示画面に【00:00】が表示されます。
- 2 分ボタンまたは秒ボタンを押して、セットしたい時間に合わせます。ボタンを長押しすると、連続して数値が変わります。
- 3 時間をセットしたら、スタート／一時停止ボタンを押してタイマーを起動させます。画面の上からブロックが落ち始め、画面いっぱいになるとブロックが溜まるとアラームが鳴ります。（アラームは約30秒鳴ります。途中で止めるには、4つのボタンのいずれかを押します。）

■ タイマーを途中で中止する

- スタート／一時停止ボタンを押す。
- ※再度押すと再び開始します。

■ 本体反転によるタイマーの作動方法

スタート／一時停止ボタンを押す以外にも、本体を180度反転させることで、タイマーを起動させることができます。

■ カウントアップ機能

【00:00】からスタート／一時停止ボタンを押すとカウントアップし、99分59秒になると、アラームが鳴ります。

■ 表示の切り替え

タイマー作動中に、モードボタンを押すと、ブロックの表示とデジタルの表示が切り替わります。
※1分未満の設定の場合、デジタル数字のみの表示となります。

使い方

■ マグネット内蔵

本体裏面にマグネットを内蔵しています。
スチール製の壁などに貼り付けて使用することができます。

※材質によっては十分に固定できない場合があります。事前に、商品が確実に固定されていることをお確かめください。

注意

テレビの画面や電子機器には近づけないでください。故障の原因となります。

■ オートパワーオフ機能

アラーム終了後、約3分後に表示が消えます。
再度、使用するには本体を反転させるか、スタート／一時停止ボタンを押します。

アフターサービス

- 1 保証書の内容のご確認と保存のお願い
必ず「販売店印およびお買い上げ日」をご確認のうえ、お買い上げの販売店から受け取り、内容をよくお読みのうえ、大切に保管してください。
- 2 保証期間は、お買い上げ日より1年間
- 3 「amadana」カスタマー登録のお勧め
「amadana」を愛着を持って長くお使いいただくために、「amadana」カスタマー登録をお勧めしています。本カスタマー登録の特典や登録方法は別紙の通りです。商品お買い上げ後1年以内が登録期限です。お早めにご登録ください。
- 4 修理をお申しつけされるとき
＜保証期間中＞ 製品に保証書を添えて、お買い上げの販売店にご持参ください。保証書の記載内容に基づき修理いたします。
＜保証期間を経過しているとき＞ 修理すれば使用できる商品は、ご要望により有料修理いたします。
- 5 補修用性能部品の保有期間は、製造打ち切り後6年間です。
ただし、「amadana」カスタマー登録に記録したくと別規定を適用させていただきます。（詳細は別紙「amadana」カスタマー登録特典をご覧ください。）
※性能部品とは、その製品の機能を維持するために必要な部品です。
- 6 修理料金の仕組み
修理料金は、技術料、部品代、出張料などで構成されています。【技術料】は、

仕様

型名	MT-123
タイマー設定	1秒～99分59秒
カウントアップ	99分59秒
電源	ボタン型電池（CR2032）2個
オートパワーオフ	約3分

診断・故障箇所の修理および部品交換・調整・修理完了時の点検などの作業にかかる費用です。部品代 は、修理に使用した部品および補助材料代です。出張料は、製品のある場所へ技術者を派遣する場合の費用です。（本機の場合、持ち込み修理となります）

7 上記の内容についての詳細、贈答、転居の場合など、その他、製品に関するお問い合わせ、ご質問がございましたら、お買い上げの販売店または、弊社のサポートセンターまでお気軽にご相談ください。
■ お客様ご自身の修理、分解や改造は絶対しないでください。

お客様サポートセンター

修理・お取り扱い・消耗品や部品のご購入などのご相談は、お買い上げの販売店もしくは弊社サポートセンターにお問い合わせください。所在地、電話番号などは変更になることがありますので、あらかじめご了承ください。

フリーダイヤル **0120-161914**

受付時間 10:00～19:00 年中無休
携帯電話・PHSの方はこちらへ Tel (03)5774-0947
■ファックスでのお問い合わせ Fax (03)5467-0431
製品の【品番・お問い合わせ内容】とお客様の【お名前・ご住所・電話番号・FAX番号】をご記入のうえ、お問い合わせください。

キッチンタイマー保証書

取扱説明書、本体表示などの注意事項に従った使用状態で保証期間内に故障した場合には、無料修理いたします。製品と本書をご持参のうえ、お買い上げの販売店にお申しつけください。製品のある場所での出張修理や製品輸送の場合は、出張料や輸送料などの実費を申し受けます。

型 名		MT-123		修理メモ
■ お客様情報	お名前			
	TEL			
	ご住所 〒			
■ お買い上げ日	■ 販売店名・住所			
年 月 日				
保証期間 お買い上げ日より 本体1年	TEL			

■ 印欄に記入のない場合は無効となりますから、必ずご確認ください。

1. ご転居、ご贈答などで、お買い上げ販売店にお申しつけできない場合は、弊社のお客様サポートセンターにお申しつけください。
2. 保証期間内でも次の場合には有料修理になります。
(イ) 使用上の誤り、および改造や不当な修理による故障および損傷。(ロ) お買い上げ後の輸送・移動・落下などによる故障および損傷。(ハ) 火災、地震、水害、落雷、その他の天災地変、および公害、塩害、ガス害(硫化ガスなど)、異常電圧、指定外の使用電源(電圧、周波数など)による故障および損傷。(ニ) 一般家庭用以外(たとえば業務用の長時間使用、車載、船舶へのとう載)に使用された場合の故障および損傷。(ホ) 本書のご提示がない場合。(ヘ) 本書にお買い上げ年月日、お客様名、販売店名の記入のない場合あるいは字句を書きかえられた場合。(ト) 消耗部品の交換。
3. 本書は日本国内においてのみ有効です。This warranty is valid only in Japan.
4. 本書は盗難・火災などの不可抗力以外で紛失された場合は、再発行いたしませんので大切に保存してください。

- お客様にご記入いただいた記載内容は、保証期間内のサービス活動およびその後の安全点検活動のために利用させていただく場合がございますので、ご了承ください。
- この保証書は、本書に明示した期間・条件のもとにおいて無料修理を約束するものです。従ってこの保証によって保証書を発行している者(保証責任者)、およびそれ以外の事業者に対するお客様の法律上の権利を制限するものではありませんので、保証期間経過後の修理などについてご不明な場合は、お買い上げの販売店または弊社のお客様サポートセンターにお問い合わせください。

株式会社 リアル・フリート
〒150-0001 東京都渋谷区神宮前6-27-8 tel 03-5774-0947

http://www.amadana.com/

Safety Precautions

Thank you for purchasing amadana cooking timer. Carefully read this instruction manual (with warrantee form) before using the product for proper use. Keep this instruction manual at hand for future reference.

Safety Precautions

■ Be sure to read the following safety precautions before using this cooking timer. Keep this manual handy for later reference.

Warning

This symbol is used to indicate information that can result in personal death or serious injury if ignored.

- Misuse of batteries can cause them to leak and damage nearby items, and can create the risk of fire or personal serious injury.
- Never expose batteries to direct heat or dispose of them by incineration.
- Never try to alter the cooking timer or take it apart.
- Never allow batteries to become shorted.
- Never charge batteries.
- Always make sure that the battery's positive _ and negative _ ends are facing correctly when you load it into the cooking timer.
- After removing the battery from the cooking timer, put it in a safe place where it will not get into the hands of small children and accidentally swallowed.
- Keep batteries out of the reach of small children. If accidentally swallowed, consult with a physician immediately.

Handling this product will expose you to lead a chemical known to the state of California to cause cancer, and birth defects or other reproductive harm. Wash hands after handling.

Caution

This symbol is used to indicate information that can result in personal injury or material damage if ignored.

- Misuse of batteries can cause them to leak and damage nearby items, and can create the risk of fire or personal injury.
- Use only the type of the battery specified for this cooking timer in this manual.

Handling Precautions


- Avoid use and storage in areas subjected to temperature extremes, or a large amount of humidity and dust.
- Never drop the cooking timer or otherwise subject it to strong impact.
- Press the keys of the cooking timer correctly by confirming figures on the display.
- Never try to take the cooking timer apart.
- Never dispose of the cooking timer by burning it.
- Use a soft, dry cloth to clean the exterior of the cooking timer. Wipe it off with a cloth moistened in a weak solution of water and a mild neutral household detergent. Never use thinner, benzene or other volatile agents to clean the cooking timer.
- In no event shall REALFLEET Co., Ltd. be liable to anyone for special, collateral, incidental, or consequential damages in connection with or arising out of the purchase or use of these materials. Moreover, REALFLEET Co., Ltd. shall not be liable for any claim of any kind whatsoever against the use of these materials by any other party.

Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this products is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact REALFLEET, your household waste disposal service or the shop where you purchased the product.



Names and functions

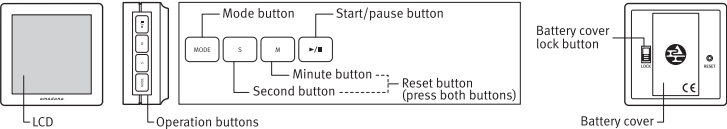

Preparations

Remove the insulating sheets

Remove the insulating sheets that stick out from the battery cover before use. [Fig. 1]

* The batteries that come with the product are for test use and do not last long.


Time to replace the batteries

If you see [Fig. 2] on the LCD, replace with new button batteries (CR2032).

* Under the situation for which the battery replacement is necessary [Fig. 2], it is likely not to operate correctly as the alarm doesn't ring, and the display disappears.

How to replace the batteries

Release the battery cover lock button as shown in [Fig. 3]] to remove the battery cover. Replace the batteries, close the battery cover, and slide the battery cover lock button to "LOCK".

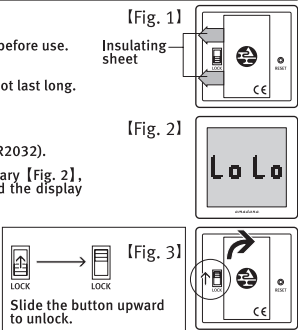


Product features

Display with blocks


This cooking timer indicates the elapsed time by piled blocks displayed on the screen.

* When the time set is less than 1 minute, only digital numbers will be available.



Equipped with a top/bottom sensor

This product is equipped with a top/bottom sensor to detect whether the body is placed normally or upside down. With this sensor, the timer can be started even with the body upside down.



How to Use

■ To set the time and start the timer


- 1 Press the minute button and the second button at the same time. [00:00] will be displayed on the LCD.
- 2 Press the minute button or the second button to set the desired time. Hold down the button for a while to change the digits continuously.
- 3 When you are done with setting the time, press the start/pause button to start the timer. Blocks will start falling from the upper side of the screen and when the blocks fill the screen completely, an alarm will beep (The alarm will be on for about 30 seconds. In order to stop the alarm, push any one of four buttons located on the right side of the display).

■ Stop the timer in mid-course

Press the start/pause button.
* Press the start/pause button again, the timer will start.

■ To start the timer by turning the timer upside down

You can start the time by turning the timer upside down as well as pushing the start/pause button.



■ Count-up function

Press the start/pause button when [00:00] is displayed to start counting up. When 99 minutes and 59 seconds elapse, the alarm will beep.

How to Use

■ To switch display

While the timer is operating, press the mode button to switch block and digital display.

* When the set time is less than one minute, only digital display is available.

■ Built-in magnet

A magnet is built in on the back side of the timer. You can attach the timer on steel wall etc.

* On some materials, the timer may not be firmly attached. Make sure that the product is firmly attached.

■ Auto power-off function

About 3 minutes after the alarm goes off, the display will turn off.

To use the timer again, turn it upside down or press the start/pause button.

After-sale service

1. Request for checking and keeping of the warranty. Make sure to check the "dealer's seal/signature and the date of purchase" on the warranty before you receive it from a dealer. Read the contents of warranty thoroughly and keep it in a safe place.
2. The validity of warranty is one year from the date of purchase.
3. Recommendation of " amadana " Customer Registration We recommend the "amadana" Customer Registration to all our customers for you to enjoy using our products over a long period. Refer to the separate document for the privileges this service offers and how to register for membership. Deadline for the registration is one year from the date of purchase.
4. About repair order [Under warranty] Take the product with the warranty certificate to the store you purchased the product if it is under warranty. We will undertake the repair work according to the condition of the warranty. [Out of warranty period] If customers so wish, the repair work will be done on the product which can be used again after the repair. However, there will be a charge for the repair work.

5. The tenure of the performance parts for maintenance* is 6 years from the discontinuation of production. However, the different standard will applied for the customers who are registered for "amadana" Customer Registration. (See "amadana" Customer Registration Privilege provided separately.) *The term "the performance parts for maintenance" refers to the parts that are necessary for the maintenance of the product.
6. Details of repair charges Repair charges are composed of technical fees, parts prices and visiting fees. The technical fees include the cost of diagnosis of the nature and location of the problem and its repair, cost of change of parts, adjustment and checking at the completion of the repair work. Parts prices include the price of the parts used and of the auxiliary materials used for repair. The visiting fee refers to the cost of dispatching an engineer to where the product stands. (In the present case, the product should be brought to the store by the customer.)
7. Do not hesitate to contact the store you purchased the product, or the support center of our company for any inquiries concerning our products including the details of the above contents, purchasing of the product as a gift and change of address. ■ Never repair, disassemble, or remodel our products by yourself.

Customer Support Center

Please contact your dealer or our support center for repairs, availability, purchase of consumable supplies or parts. Note that the address and/or telephone number are subject to change.

Open 10:00 - 19:00, No holiday
Call +81-3-5774-0947 from a cell phone or PHS
Fax: +81-3-5467-0431
Be sure to write the product number and your question, name, address, telephone number, and FAX number when contacting us.

Toll-free number 0120-161914

REALFLEET co., Ltd.

Cooking Timer warranty

The repair work will be done without charge for the failure occurring under warranty and in the condition that the product was correctly used according to the display on the machine and other instructions. Bring this document and the product to the store of purchase. In the case where the field rep-8, at where the product stands, or when the transportation of the product is necessary, the actual cost of the travel or transport expenses will be charged.

Model name		MT-123		Repair Note
★ Customer information	Name	TEL		
	Address			
★ Date of purchase	★ Dealer name			
	One year from the date of purchase (body)			
		TEL		

Make sure to fill in all the fields indicated by ★. If not, this warranty is invalid.

1. If you cannot come to the dealer from which you bought the product due to moving or if you are given this product as a gift, please contact our customer support center.
2. Even within the guarantee period, you will be charged for the repair service in the following cases:
(a) Failure or damage due to erroneous use, remodeling, or unauthorized repair. (b) Failure or damage due to transportation, moving, or fall after purchase. (c) Failure or damage due to natural disasters including fire, earthquake, flood, or lightning strike, environmental pollution, damage from salt water, damage from corrosive gases (such as sulfide), abnormal voltage, invalid power source (voltage or frequency) etc.. (d) Failure or damage when this product is used in a situation other than general household use (for example, long-term use for professional purpose, loading to a vehicle or marine vessel). (e) When this guarantee is not supplied. (f) When the date of purchase, customer name, dealer name are not filled out or when they are altered. (g) Exchange of consumable parts.
3. This warranty should be retained for future reference as this will not be reissued if you lose it.

This warranty is intended for the free repair service in the terms and conditions described in this document. This warranty does not limit your legal rights. Please contact your dealer or our support center for a repair service after the warranty period etc. ■ For more information on the repairs after the warranty period and the holding period of functional spare parts, see the section on after-sale service.

REALFLEET co., Ltd.
m² Harajuku 5F, Jingumae 6-27-8,
Shibuya-ku, Tokyo Japan 150-0001 tel: +81-3-5774-0947